





PRE – INSTALLATION

NOTE: The preparation of the site, in readiness for the installation of the appliance, is the responsibility of the site owner, not of the manufacturer of the appliance.

- **a.** The floor must be level and capable of supporting the weight of the cooker (approximate weight 250kg). It is important to ensure the flooring is laid before delivery and runs underneath the cooker. Flooring should not be laid up to the cooker after installation.
- b. The cooker measurements are 600mm deep and 900mm high to the working surface with a width of 600mm The EVH 60 should be installed with a minimum of 30mm clearance from the back wall to allow for the electric cable entry. This 30mm gap is best sealed by running the worktop behind the cooker, though a standard 30mm stainless infill strip that fits to the back of the cooker is supplied with the Everhot. On no account should the cooker be pushed hard against the back wall as this may damage the electric cable. A minimum gap of 5mm per side is required to allow installation and removal of the cooker please contact us in advance of installation if this is not possible. Where the end grain of a wooden worktop is adjacent to the cooker, we recommend that this is increased to 10mm to minimise the chance of the worktop splitting.
- **c.** Clearance must be allowed for the raising of the cooker lid(s) into the upright position (minimum height of 1530mm from ground level). Please see side view diagrams for further clarification. A 5mm gap on each side of the cooker lid should be allowed when in the raised position (each lid is 590mm wide to allow for overhead cupboards).
- d. The appliance must be used on 220-240V AC only and should be plugged into a standard 13 amp socket. The 13 amp socket should be accessible and positioned adjacent to the cooker, so as not to impede the opening of the top lid, and ensuring the plug is not exposed to steam or excessive moisture. If the socket cannot be positioned immediately adjacent to the cooker, please see diagrams for exact lengths of cables (unfortunately it is not possible to extend these cable lengths). If the power supply cord is damaged, it must be replaced by the manufacturer or their representative, as special purpose tools are required. An Everhot cooker should NOT be hard wired please install using the supplied 13 amp plug.
- e. The control box is connected to the cooker via a 20mm flexible conduit to allow for a choice of positioning. It may be sited within an adjacent cupboard or on a worktop as required (the control box must not be covered by combustible material or be positioned where contamination with liquids is likely). The control box is not suitable for wall mounting and should remain freestanding in order to facilitate future maintenance. The conduit and power cable should also be easily accessible. Once the position has been decided the control box should not be moved in day to day use. Standard conduit length supplied is 2 metres (unfortunately it is not possible to extend these cable lengths). Where the control box lead is passing through a cupboard this can be done by our installers on delivery. If it needs to pass through a wall or thicker material a 60mm diameter hole should be prepared in advance of the delivery.

Your **EVERHOT** cooker has been built to comply with the following UK and European Directives, and carries the UKCA and CE mark.

1. EMC Directive (2014/30/EU) 2. Low Voltage Directive (2014/35/EU)

3. Electromagnetic Compatibility Regulations (2016) 4. Electrical Equipment (Safety) Regulations (2016)

Control of Substances - Health and Safety

This appliance contains the following substances indicated below. It is the User's/Installer's responsibility to ensure that the appropriate precautions are taken when handling, where applicable, any of the materials that could be interpreted as being injurious to health and safety.

Mineral wool, Glass Yarn.

May cause irritation to the skin, eyes, nose and throat, may be harmful if inhaled. Use appropriate protective clothing to avoid contact with body. After handling, wash hands and other exposed parts.


Your cooker does not contain ceramic insulants.

The EVERHOT is a high quality appliance that will provide decades of use, however when you feel that it has reached the end of its working life, please contact us and we will remove it and recycle it free of charge





The diagrams below are not to scale and are simply to show the relevant dimensions

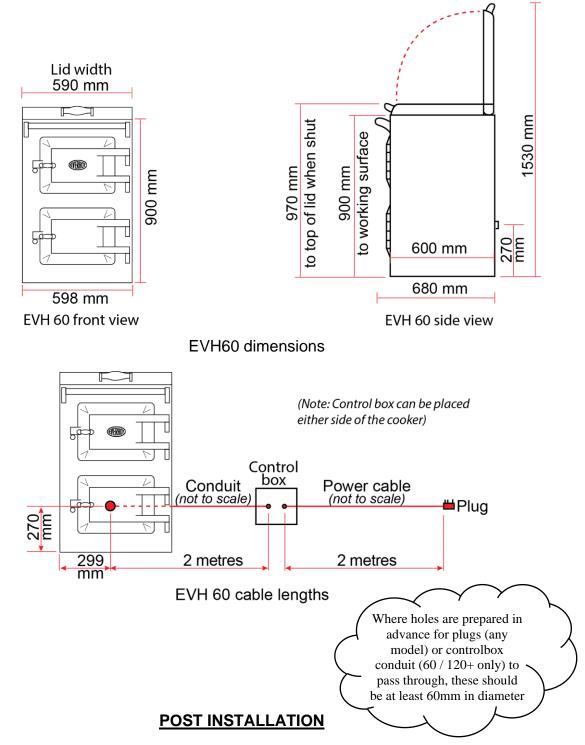

Point a. below will normally be checked by the **EVERHOT** technician who installs your cooker

- a. Before use, check that the cooker is level, upright and stable.
- b. On reaching working temperature, ensure that the hot/simmer plate surfaces are flush with the surrounds - this can be adjusted using a 5mm allen key in the bolts at each corner of the hotplates.
- c. On initial heating up odours may be given off from the insulants used. These will disappear after a number of hours.